
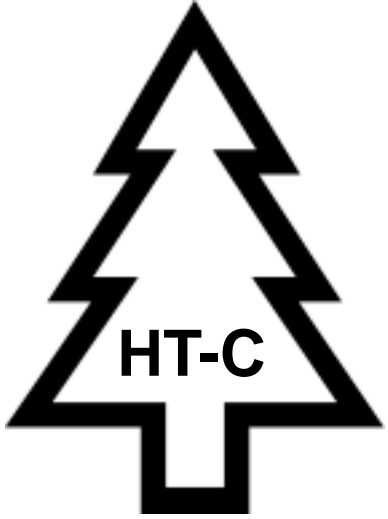


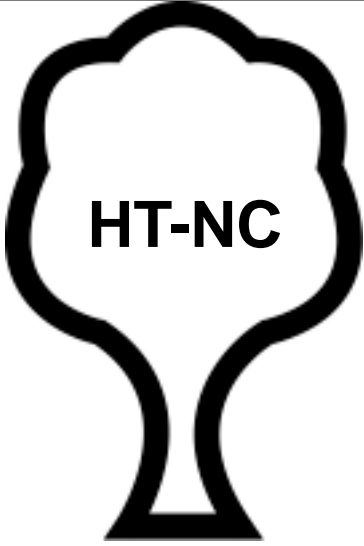

Proposed Wood Symbolology

		 <p>NO-SWPM</p>	
<p>Conifer Symbol:</p> <p>Variations:</p> <p>HT-C: Heat Treated Conifer (56C for 30 minutes)</p> <p>KD19-C: Kiln Dried <20% (but not meeting 56 for 30)</p> <p>HT19-C: Heated (56/30) and Dried to less than 20% MC</p> <p>CPI-C: Chemical Pressure Impregnated</p>	<p>Non-Conifer Symbol:</p> <p>Variations:</p> <p>HT-NC: Heat Treated Non-Conifer (56C for 30 mins.)</p> <p>KD19-NC: Kiln Dried <20% (but not meeting 56 for 30)</p> <p>HT19-NC: Heated (56/30) and Dried to less than 20% MC</p> <p>CPI-NC: Chemical Pressure Impregnated</p>	<p>NO-SWPM Symbol:</p> <p>To be used for wooden based packaging materials which do NOT meet the definition of solid wood.</p> <p>Examples: Constructions of any combination of plywood, OSB, masonite, presswood, and non-wooden materials.</p> <p>Would not use on materials clearly not of wooden based materials (ex: entirely plastic).</p>	<p>Pest-Free Symbol:</p> <p>To be used on any wooden based packaging that meets 100% of ALL existing Intl. regulations restricting solid wood.</p> <p>Examples: Assemblies made entirely of NON-SWPM or made in combination with any amount of solid wood that has been heat treated AND dried to 20% or less moisture or chemical pressure impregnated.</p>